

**◆ Important safety warning prior to using the Dual Drill**

**Warning:** This manual contains important information about the use and maintenance of the product. Keep this manual for future reference. Be sure to read the manual completely before using the Dual Grill. Failure to follow the warnings and cautions printed here may result in fire, property damage, injury or death.

- NEVER use this product in a house, tent, vehicle, or an unventilated area. This product consumes oxygen and produces carbon monoxide, which can be deadly. Always use the product in a well-ventilated area or outside.
- NEVER touch the Body, Receiving Bucket, or any other part of the product directly with the hands or any part of the body when it is in use. To do so may result in injury or burns.
- NEVER move, shake, or carry the product when it is in use.
- NEVER place your face or any part of your body near the stove when lighting. Always keep a reasonable distance between the charcoal and your body when lighting as close contact may result in burns or injury.
- NEVER leave the lighted product unattended.
- NEVER allow children to use the product. Always supervise children in the vicinity of this product when it is in use.
- ALWAYS supervise pets or animals in the vicinity of the product when it is in use.
- ALWAYS place the product on a flat, firm surface when it is in use. The Dual Grill can be placed on a table top. ALWAYS make sure that the table top is flat, and stable before the product is used.
- NEVER use the product near other heat sources.
- NEVER use the product any other way than as described in this annual. The Dual Grill is intended for outdoor use only.
- ALWAYS confirm that charcoal is completely extinguished before disposal.
- NEVER use water to extinguish the fire. Failure to comply may result in cracking or distortion of the product.
- NEVER use water to extinguish the fire as the steam may cause severe burns.
- NEVER overfill with charcoal. Failure to comply may cause cracking or distortion of the product parts.
- ALWAYS clean up the grill after use. Dry completely and apply some oil before stowing the unit.
- NEVER stow the product when it is hot. ALWAYS stow the product after it has completely cooled. Failure to comply may cause damage to the carrying case and/or to the product. This may also cause burns.
- ALWAYS use two lifters and both hands whenever applicable.
- ALWAYS use the frying pan with food. Failure to comply may result in damage to the non-stick coating.
- NEVER place heavy pots such as a Dutch oven on top of the grill. Failure to comply may result in damaging or destroying the grill.
- ALWAYS check the product and review this manual before use.



**Shin Fuji Burner CO.,LTD.**  
 1-1-3 Miyukihama, Mito-cho, Toyokawa-city,  
 Aichi-pref, 441-0314 Japan  
 Phone:+81 533 75 5000 FAX:+81 533 75 5033  
 www.sotooutdoors.com

Office  
 1772 Carriage Place  
 Springfield OR 97477 USA  
 info@sotooutdoors.com  
 Phone: 503-314-5119 Fax: 541-741-6999




T A B L E T O P  
**DUAL GRILL**  
 O D - D G Patent Pending

**Manual  
 Instructions**



Congratulations on your purchase of SOTO Outdoors' Dual Grill OD-DG. Before using this product, please read the following instructions in order to use it safely and properly. Please keep this instruction manual in an easily accessible place.

**■ Name of the parts**

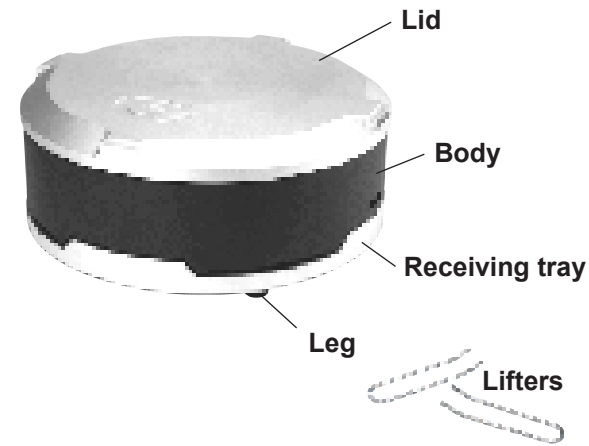

**■ Assembly drawing**



**■ Product specifications**

Size: 310 mm in diameter;  
 170 mm (12.2inches x 6.7inches) high when in use at the maximum height grill position.  
 310 mm in diameter;  
 140mm (12.2inches x 5.5inches) high when stowed.

Weight: 5kg (11lb.)

Materials: Aluminum / Lid, Body, receiving tray  
 Stainless Steel / Grill, Charcoal bucket  
 Rubber / Legs  
 Chromium plated steel / Lifters

