

◆ Important safety warning prior to using the Dual Drill

Warning: This manual contains important information about the use and maintenance of the product. Keep this manual for future reference. Be sure to read the manual completely before using the Dual Grill. Failure to follow the warnings and cautions printed here may result in fire, property damage, injury or death.

- NEVER use this product in a house, tent, vehicle, or an unventilated area. This product consumes oxygen and produces carbon monoxide, which can be deadly. Always use the product in a well-ventilated area or outside.
- NEVER touch the Body, Receiving Bucket, or any other part of the product directly with the hands or any part of the body when it is in use. To do so may result in injury or burns.
- NEVER move, shake, or carry the product when it is in use.
- NEVER place your face or any part of your body near the stove when lighting. Always keep a reasonable distance between the charcoal and your body when lighting as close contact may result in burns or injury.
- NEVER leave the lighted product unattended.
- NEVER allow children to use the product. Always supervise children in the vicinity of this product when it is in use.
- ALWAYS supervise pets or animals in the vicinity of the product when it is in use.
- ALWAYS place the product on a flat, firm surface when it is in use. The Dual Grill can be placed on a table top. ALWAYS make sure that the table top is flat, and stable before the product is used.
- NEVER use the product near other heat sources.
- NEVER use the product any other way than as described in this annual. The Dual Grill is intended for outdoor use only.
- ALWAYS confirm that charcoal is completely extinguished before disposal.
- NEVER use water to extinguish the fire. Failure to comply may result in cracking or distortion of the product.
- NEVER use water to extinguish the fire as the steam may cause severe burns.
- NEVER overfill with charcoal. Failure to comply may cause cracking or distortion of the product parts.
- ALWAYS clean up the grill after use. Dry completely and apply some oil before stowing the unit.
- NEVER stow the product when it is hot. ALWAYS stow the product after it has completely cooled. Failure to comply may cause damage to the carrying case and/or to the product. This may also cause burns.
- ALWAYS use two lifters and both hands whenever applicable.
- ALWAYS use the frying pan with food. Failure to comply may result in damage to the non-stick coating.
- NEVER place heavy pots such as a Dutch oven on top of the grill. Failure to comply may result in damaging or destroying the grill.
- ALWAYS check the product and review this manual before use.



Shin Fuji Burner CO.,LTD.
 1-1-3 Miyukihama, Mito-cho, Toyokawa-city,
 Aichi-pref, 441-0314 Japan
 Phone:+81 533 75 5000 FAX:+81 533 75 5033
 www.sotooutdoors.com

Office
 1772 Carriage Place
 Springfield OR 97477 USA
 info@sotooutdoors.com
 Phone: 503-314-5119 Fax: 541-741-6999




TABLETOP
DUAL GRILL
 OD-DG Patent Pending


**Manual
 Instructions**

Congratulations on your purchase of SOTO Outdoors' Dual Grill OD-DG. Before using this product, please read the following instructions in order to use it safely and properly. Please keep this instruction manual in an easily accessible place.

■ Name of the parts

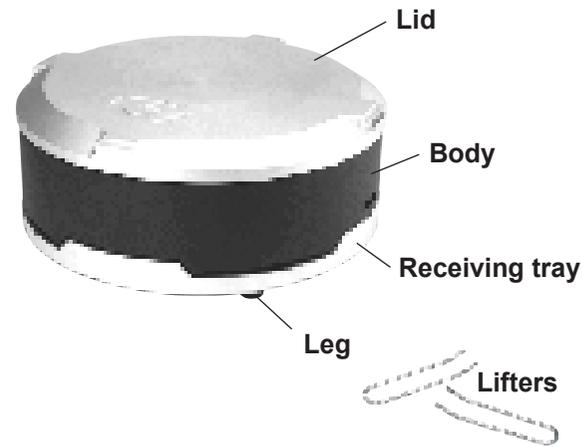

■ Assembly drawing

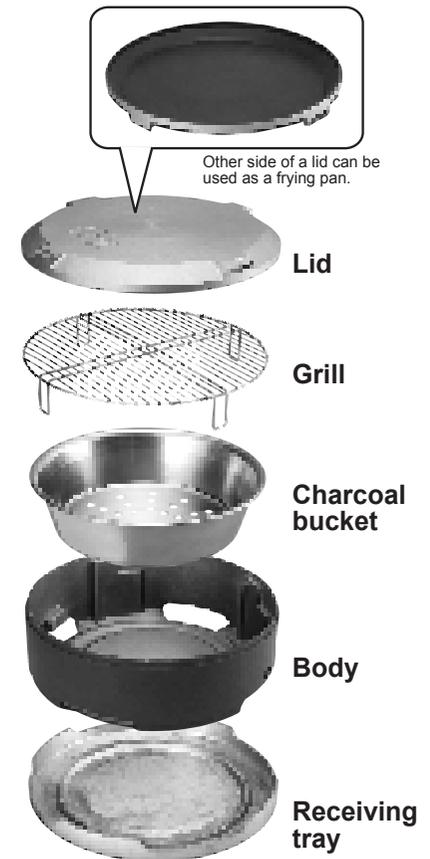

■ Product specifications



Size: 310 mm in diameter;
 170 mm (12.2inches x 6.7inches) high when in use at the maximum height grill position.
 310 mm in diameter;
 140mm (12.2inches x 5.5inches) high when stowed.

Weight: 5kg (11lb.)


Materials: Aluminum / Lid, Body, receiving tray
 Stainless Steel / Grill, Charcoal bucket
 Rubber / Legs
 Chromium plated steel / Lifters

■ Rotating the body to secure the air vents

Lift the body from the receiving tray. Open and close the air vents by rotating the body. (ALWAYS use two lifters and both hands when rotating.)

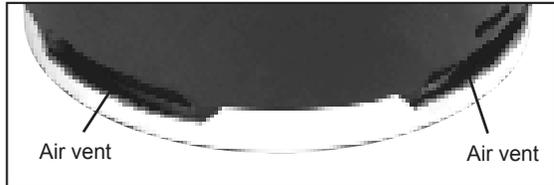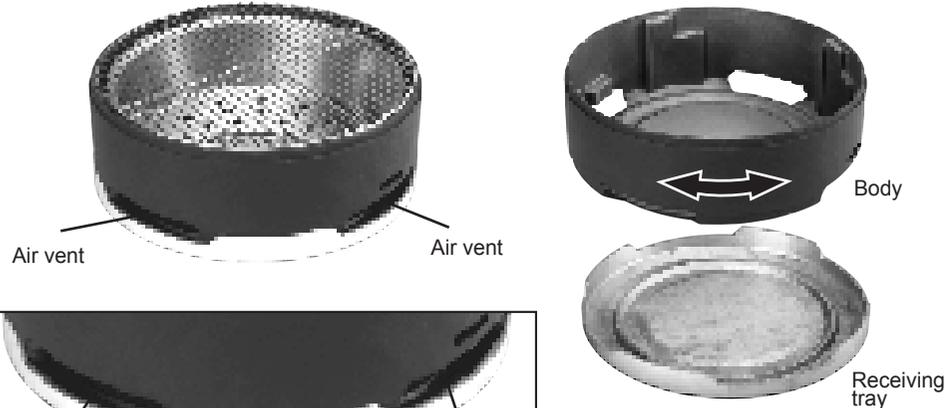

Picture shows the opened air vents. (Open air vents when lightening and cooking.)

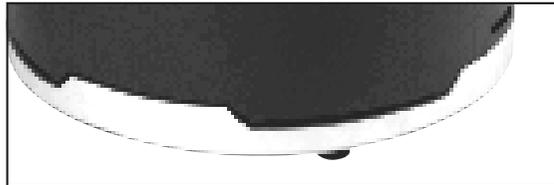


Picture shows the closed air vents. (Close air vents when extinguishing the fire and stowing)

The air vents (shaped as 凹凸) are located at the lower end of the body. They can be opened and closed by rotating the body.

! CAUTION
NEVER move the product when in use.

■ Adjusting the heights of the grill

Three ways to adjust the height of the grill: Simply rotate the grill to set the grill height lower or higher.

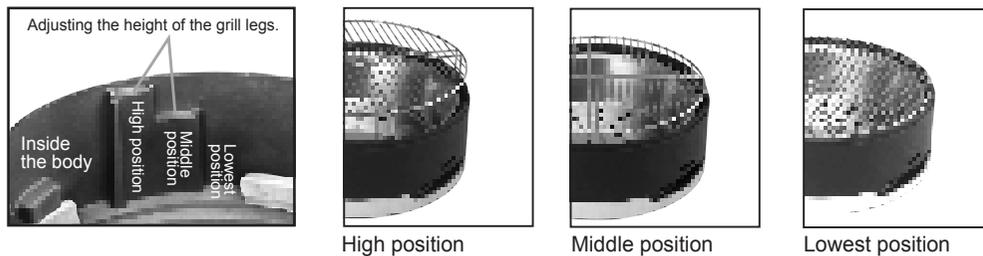

■ Use of the lifters

"Grill", "Lid", and "Body" can be lifted with the lifters.



! CAUTION ALWAYS use two (2) lifters with both hands!
When lifting part of the product with the lifters, make sure to use two lifters and both hands as shown in the picture below. NEVER use only one lifter to lift up the applicable part of the product. Use of one lifter may cause sudden dropping of the product, resulting in burns.


■ 2 uses: grill or frying pan

This product can be used as a grill or a frying pan.



■ Environmentally friendly: Extinguishing the flame

After cooking, the whole unit can function as the extinguisher. Simply rotate the body to close the air vents and replace the lid with the lifters. You may save the unburned charcoal for the next time you cook on this product.

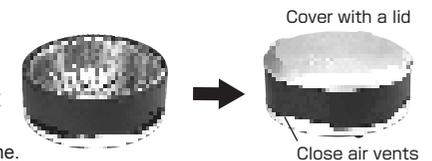

□ It takes approx. 30 minutes to completely extinguish the flame.
□ Extinguishing depends on the following conditions: the amount of charcoal burning, condition of the burning, and surrounding conditions at time of use.

! CAUTION Confirm that the flame has been extinguished prior to cleaning or stowing.
ALWAYS be cautious about residual flame on the charcoal after use. Make sure that clean up is done after the flame is completely extinguished.

! CAUTION
NEVER turn a lid upside down with two lifters immediately after use as a frying pan. It may cause sudden dropping of the product, resulting in burns.